



## A GUIDE TO FLEET TRAKKA AUDIBLE ALERTS

A Fleet Trakka with Hardware version 2.007U and Software version 2.150IR and above can support the device's internal buzzer audible alert, as follows:

	AUDIBLE ALERT	BEEPING TYPE	DEFAULT SETTING
1	Power connection	One beep	Always beep
2	Engine on	One beep	Disable
3	Power disconnection	One long beep	Disable
4	Over Fixed Speed	Continuous beep until the speed is down below the limit	Disable
5	Over Signed Speed	3 short beeps	Disable
6	Fatigue	4 short beeps	Disable

A Fleet Trakka that connects to an RFID reader can trigger the RFID buzzer's audible alert, as follows:

	AUDIBLE ALERT	BEEPING TYPE	DEFAULT SETTING
1	Remind Driver to Swipe RFID Tag	3 short beeps	Disable
2	Over Signed Speed	4 short beeps	Disable

## SUPPORT

For any queries regarding these alerts, please visit [helpdesk.euclidic.com](https://helpdesk.euclidic.com)

Or call us:

Australia 1800 382 543

New Zealand 0800 752 682